


CENTRIFUGA G 3
CENTRIFUGE G 3
CENTRIFUGEUSE G3
R - 040000

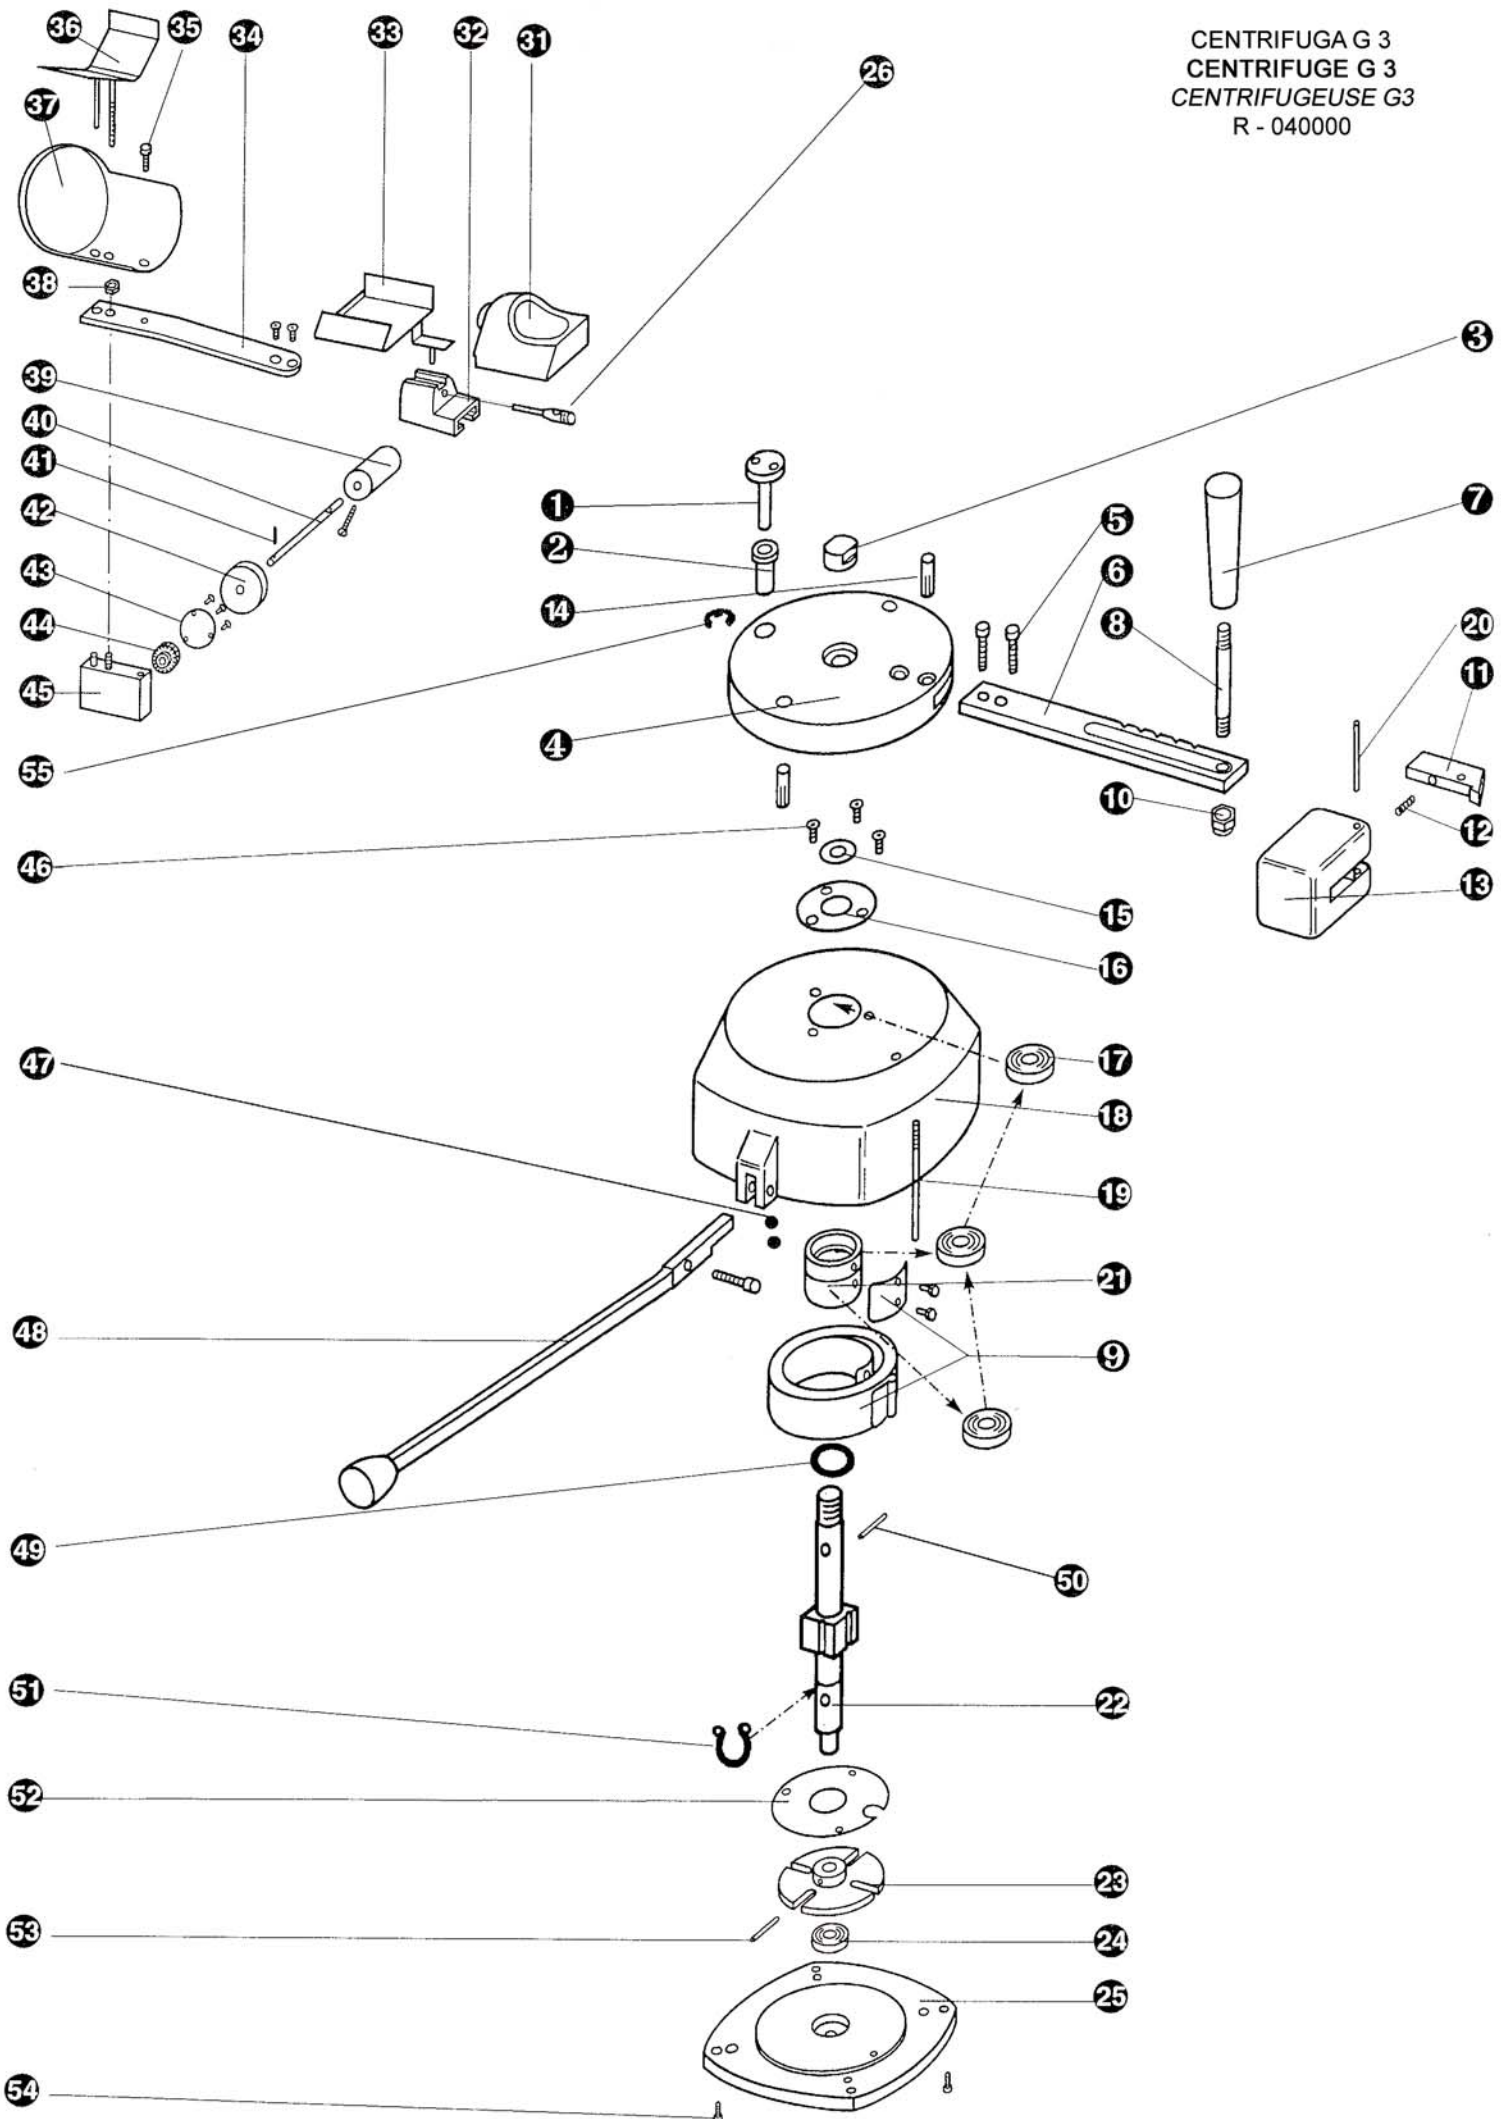

MESTRA®

CENTRÍFUGA G-3

CENTRIFUGE G-3

CENTRIFUGEUSE G-3

R-040000

N.º	Ref.	DESCRIPCIÓN	DESCRIPTION
1	040000-01	Eje brazo	Arm shaft
2	040000-02	Casquillo brazo	Arm bushing
3	040000-03	Tuerca	Nut
4	040000-04	Plato	Chuck
5	040000-05	Tornillo brazo	Arm screw
6	040000-06	Brazo de contrapeso	Counterweight arm
7	080130-31	Manilla baquelita	Bakelite grip
8	040000-08	Manilla acero inoxidable	Stainless steel grip
9	040000-09	Muelle	Spring
10	080235-06	Tuerca ciega	Blind nut
11	040000-11	Gatillo	Trigger
12	040000-12	Muelle gatillo	Trigger spring
13	040000-13	Contra peso	Counterweight
14	040000-14	Tope	Stop
15	040000-15	Arandela	Washer
16	040000-16	Arandela tapa	Cover washer
17	040000-17	Rodamiento	Bearing
18	040000-18	Cuerpo de aluminio	Aluminium body
19	040000-19	Pasador muelle	Spring pin
20	040000-20	Pasador de gatillo	Trigger pin
21	040000-21	Porta bolas	Balls holder
22	040000-22	Eje del muelle	Spring shaft
23	040000-23	Rodete disparador	Triggering impeller
24	040000-24	Rodamiento	Bearing
25	040000-25	Base de aluminio	Aluminium base
26	040000-58	Tirador de carro	Slide pull
31	040540	Crisol	Crucible
32	040000-32	Carro	Slide
33	040000-33	Cama crisol	Crucible bed
34	040000-34	Pletina brazo	Arm sheet
35	040000-35	Tornillo chapa soporte	Support plate screw
36	040000-36	Porta cilindros	Cylinder holder
37	040000-37	Chapa soporte	Support plate
38	040000-38	Tuerca	Nut
39	040000-39	Manilla de elevación	Elevation handle
40	040000-40	Eje de elevación	Elevation shaft
41	040000-41	Pasador	Pin
42	040000-42	Rodete elevación	Elevation impeller
43	040000-43	Tapa	Cover
44	040000-44	Engrane	Gear
45	040000-45	Cuerpo engrane	Gear body
46	040000-46	Tornillo tapa	Cover screw
47	040000-47	Bolas	Balls
48	040000-48	Manilla disparadora	Triggering handle
49	040000-49	Arandela eje de muelle	Spring shaft washer
50	040000-50	Pasador eje de muelle	Spring shaft pin
51	040000-51	Arandela elástica eje de muelle	Spring washer for spring shaft
52	040000-52	Tapa rodete disipador	Triggering impeller cover
53	040000-53	Pasador rodete disipador	Triggering impeller pin
54	040000-54	Tornillo base de aluminio	Aluminium base screw
55	040000-55	Arandela elástica eje brazo	Arm shaft spring washer